



ODU DOCK

Assembly Instructions, Crimp Information and Order Information

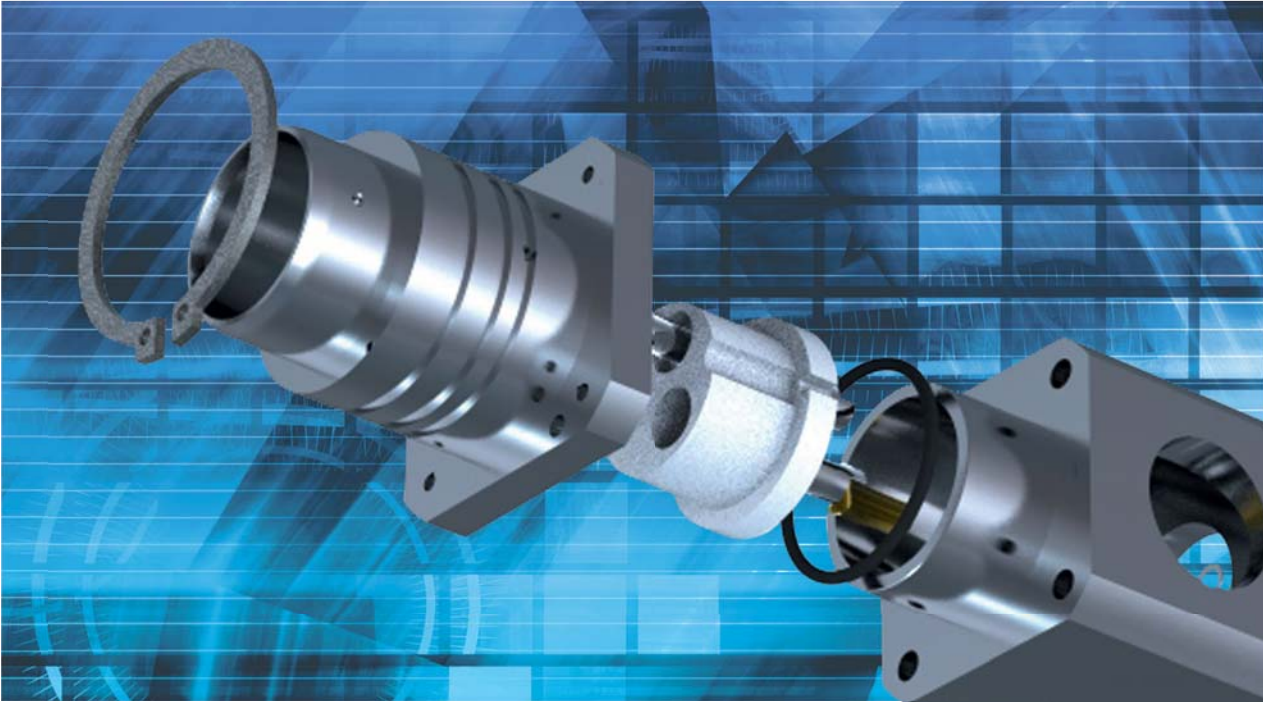

Assembly Instruction

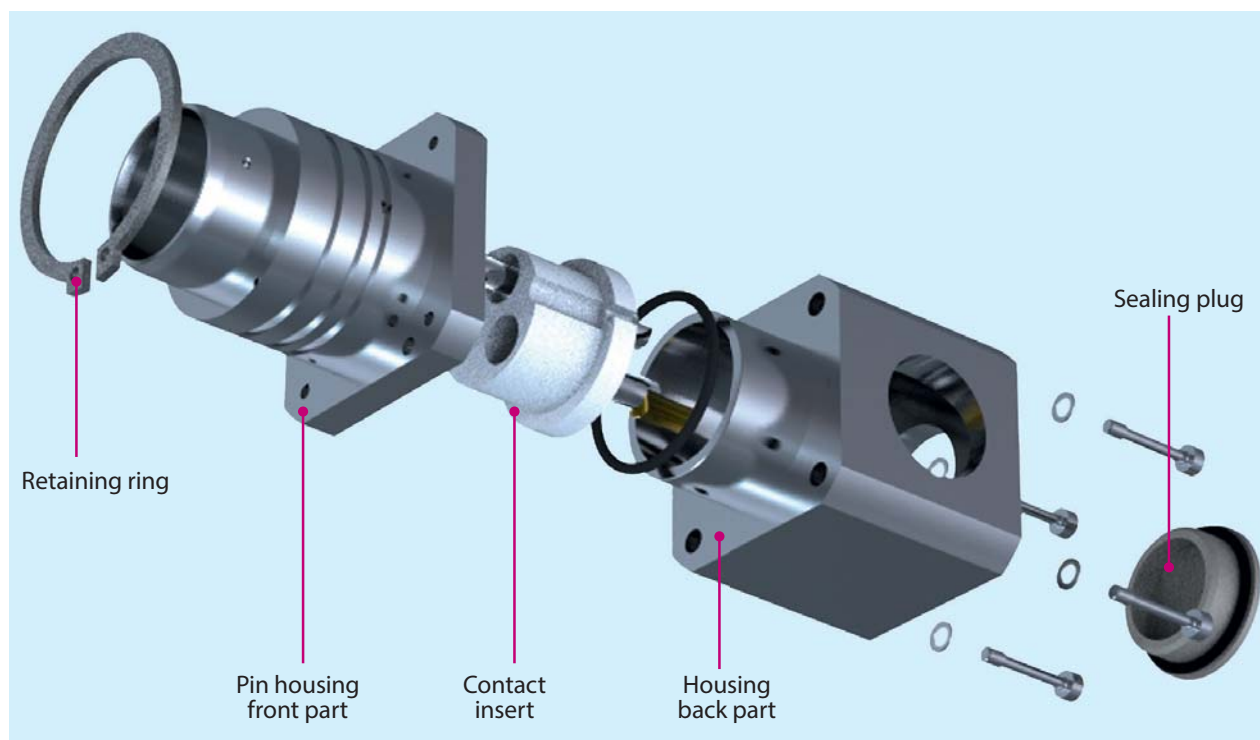

1. Slide the cable clamp and the cables, one after the other, through the back part of the housing.
2. Connect the stripped line to the contacts. If the housing is made of metal, earth the housings earthing wire.
3. Screw the front and back parts of the housing together and tighten the cable clamp.
4. Slide the complete housing into the docking plate and fix in place with retaining ring.

Tightening torque:

Size I und II = 0.8 N

Size III = 2 N